AIRCRAFT PARKING/ DOCKING CHART -ICAO	AD ELEV 85 FT 334908.5825N 0352924.1086E Mag. VAR 5.1°E 2020	GND 121.900 TWR 118.900 APP 120.300 CNT 119.300 DATIS 120.600	RAFIC HARIRI INTERNATIONAL BEIRUT **AD - OLBA**

EAST WING COORDINATES		AIRCRAFT TYPES
1	334933.2393N 352945.7786E	All Types
10	334923.0006N 352935.5234E	All Types Except EMBRAER, B767, B777, B787, B747, A300, A330, A340, A350-1000
11	334924.7891N 352936.3847E	All Types Except EMBRAER, B767, B777, B787, B747, A300, A330, A340, A350-1000
12	334926.4148N 352936.9007E	All Types Except EMBRAER, B767, B777, B787, B747, A300, A330, A340, A350-1000
2	334931.1783N 352944.3059E	All Types Except B787, A350-1000
3	334929.8674N 352942.7475E	All Types Except B787, A350-1000
5	334927.2309N 352940.1259E	All Types
6	334925.6076N 352939.4909E	All Types Except B747, B777, B787, A300-600, A330, A340, A350-1000
7	334923.6354N 352938.7152E	A319, A320, A321, DC9, B737-100/500, F70/100, TU134
8	334921.6807N 352937.2839E	All Types Except EMBRAER, B767, B777, B787, B747, A300, A330, A340, A350-1000
9	334921.5962N 352935.1591E	All Types Except EMBRAER, B767, B777, B787, B747, A300, A330, A340, A350-1000
WEST WING COORDINATES		
13	334928.0796N 352931.4214E	All Types Except EMBRAER, B757, B767, B777, B787, B747, A300, A330, A340, A350-1000
14	334926.4847N 352930.9360E	All Types Except EMBRAER, B757, B767, B777, B787, B747, A300, A330, A340, A350-1000
15	334925.0330N 352930.4655E	A319, A320, A321, MD80, B727-100, B737-100/500, F70/100, DC9, BAC11, BAe146
16	334923.4086N 352930.1698E	All Types Except EMBRAER, B777, B787, B747, A300, A330, A340, A350-1000
17	334923.1087N 352928.6673E	All Types Except EMBRAER, B777, B787, B747, A300, A330, A340, A350-1000
18	334923.9967N 352927.7874E	All Types Except B767, B777, B787, B747, A300, A330, A340, A350-1000
19	334925.8356N 352927.8195E	All Types Except B747, B777, B787, A330, A340, A350-1000
20	334927.6455N 352928.0623E	All Types Except A350-1000
21	334929.9048N 352928.6913E	All Types
23	334932.6433N 352928.3430E	All Types Except B787, A350-1000
SOUTH PARKING		
S1	334915.9063N 352933.9286E	All Types
S2	334916.7182N 352931.1579E	All Types
S3	334917.3050N 352928.4980E	All Types
NORTH PARKING (General Aviation)		
N1	335012.1874N 352925.7823E	All Types
N1A	335012.1508N 352924.5009E	Follow Marshaller's instructions
N1B	335012.2023N 352926.3599E	Follow Marshaller's instructions
N2	335012.2805N 352928.8875E	All Types
N2A	335012.2624N 352928.2263E	Follow Marshaller's instructions
N2B	335012.3179N 352930.0967E	Follow Marshaller's instructions
N3	335012.3735N 352931.9614E	All Types

NOTE: AIRCRAFT TYPES YAK42, BAC111, BAe146, AND CRJ, NEED STAIRS IN ANY DELEGATED STAND.

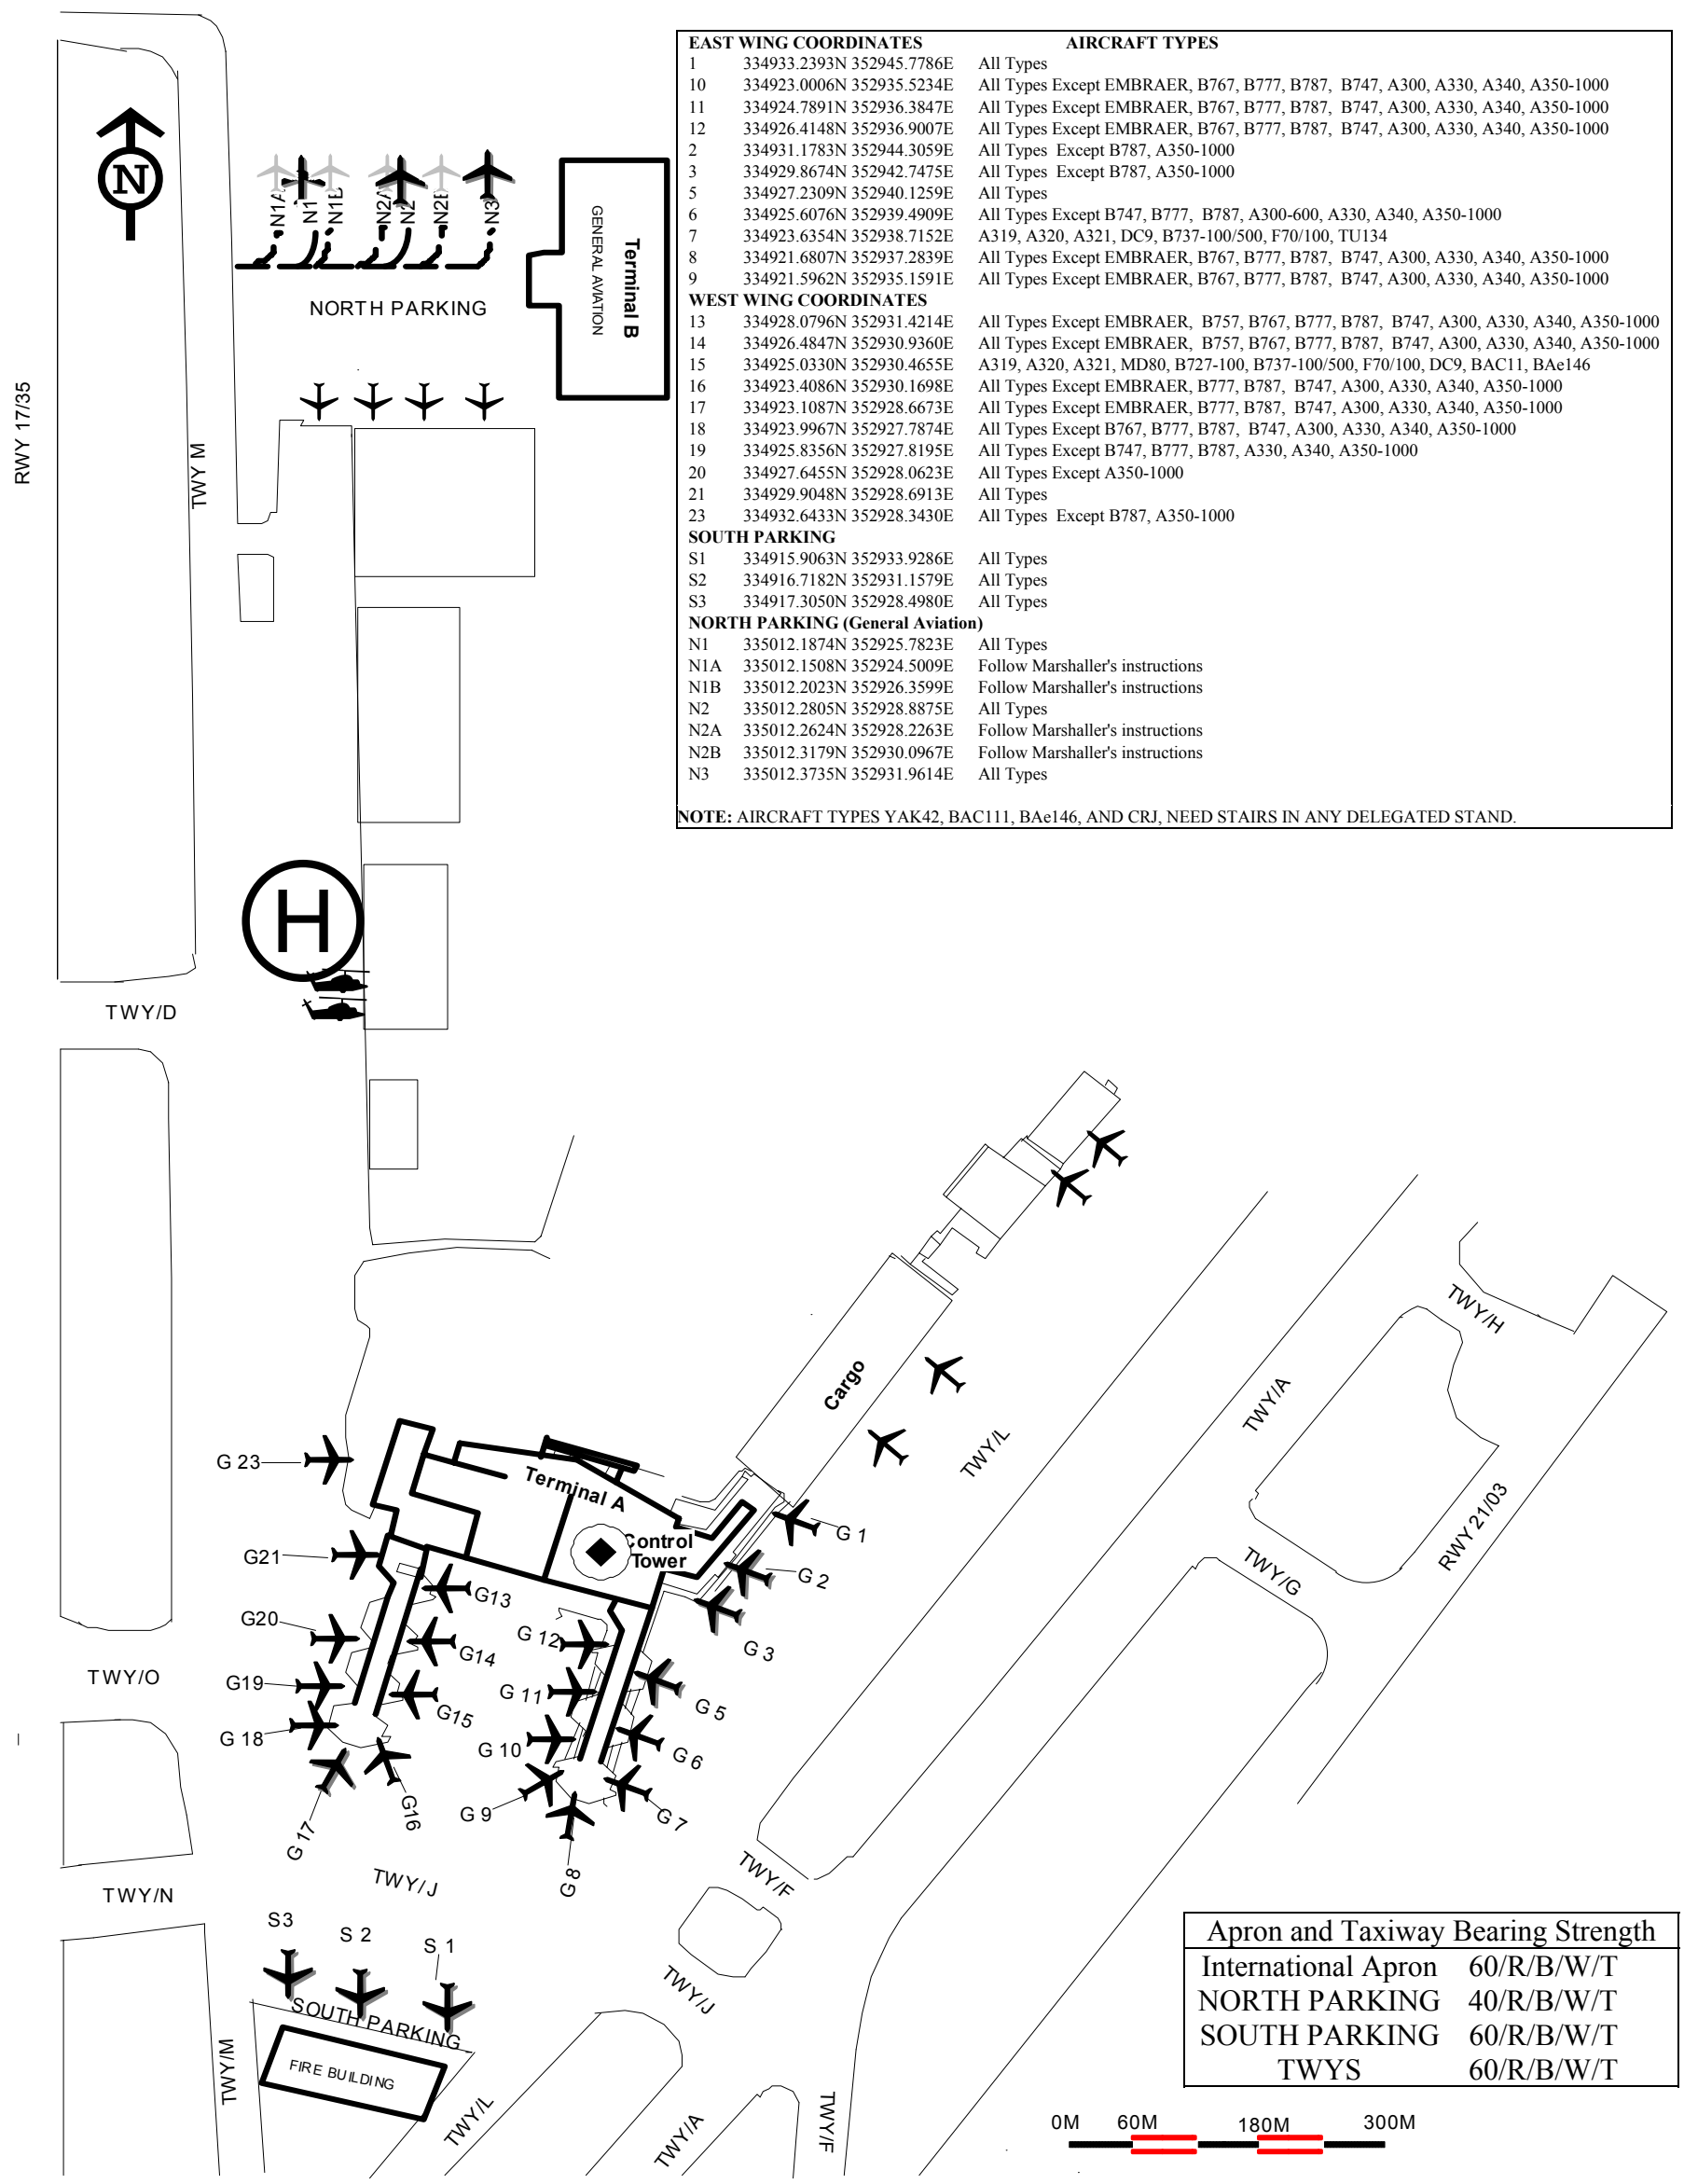

Apron and Taxiway Bearing Strength	
International Apron	60/R/B/W/T
NORTH PARKING	40/R/B/W/T
SOUTH PARKING	60/R/B/W/T
TWYS	60/R/B/W/T

INT. LEFT BLANK